





## No Quality Grade:

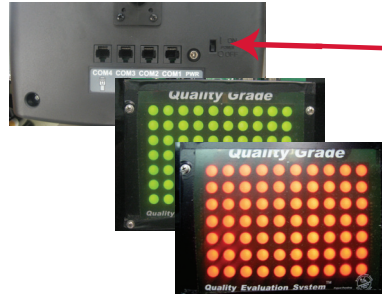

### A. Reset Power

- On the back of the Kitchen Minder slide the ON/OFF switch to off then back on
- Verify that the grade display shows Red , Yellow Orange lights
- If the grade display does not show letter grades after a few minutes proceed to step B

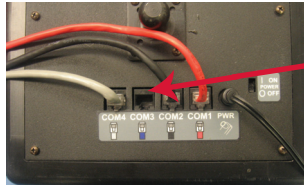

### B. Check Cables

- On the back of the Kitchen Minder unplugged the grey cable and re connect into Com 4
- On the grade sign unplugged the grey cable and re connect into the Minder port
- If grade sign does not come on after reconnecting the cables then replace the Grade Cable and Kitchen Minder

